

THUNDER TMAX

Installing a New Base Map from the TMax Software Data Base

v.04132012

1. Go to “EFI Maps” in the Main Tool Bar, then click “EFI Map Listings and Definitions”.
2. To locate the closest matching Base Map, sort by Map element specifics using the right click function of your mouse (see installation instructions located in “Help” menu).
3. Select the desired map by double clicking anywhere on the base map definition line.
4. Select “Load Base Map” from the Base Map Name Encoding window.
5. On your motorcycle, turn the Run switch and the Ignition switch to the “On” position.
6. In the Main Tool Bar, go to “Map Editing” and then “Write Module Maps and Settings”.
7. Go to “Map Editing”, then “Clear Learned Idle Control Adjustments”.
This step does not apply to Throttle-By-Wire systems.
8. In the “Tuning Maps” tree, go to “Module Configuration” and then “Basic Settings” to confirm the correct Speedo-Cal value for your year and model motorcycle.

Initializing the Module

For ThunderMax Systems on Motorcycles with Cable-Throttle Control

1. With the Run switch in “On” position, cycle the Ignition switch 30 seconds on and 30 seconds off - 3 times.
2. Start the engine. Allow the engine to warm up to operating temperature, without touching throttle (around 250 degrees).



<http://bit.ly/HBZOyB>

Click above to watch the video on-line!

For ThunderMax Systems on Motorcycles with Throttle-By-Wire Control

1. Turn the main power and run switch “On” for 20 seconds, uninterrupted.
2. Cycle the main switch “Off” and “On”, and then start the engine.
3. Let the motorcycle idle on its own for 15 seconds and shut off. Restart and allow engine idle to operating temperature (around 250 degrees).



<http://bit.ly/HwittJ>

Click above to watch the video on-line!

During engine warm-up, remain linked to the ThunderMax module to monitor the engine temp. When finished, (1) un-link the software, (2) turn the engine off, and then (3) disconnect the cable. The motorcycle is now ready for a test ride and review.

If you have questions or require additional assistance, start by reviewing the condition of your new tune in the **TMax Control Center** (on the software’s Main Tool Bar) or you may transmit the module data through the **TMax Auto Support** function (on the software’s Main Tool Bar).